

For vehicles with a navigation system, refer to the “Navigation System Owner’s Manual” for information regarding the equipment listed below.

- Navigation system
 - Air conditioning
 - Windshield wiper de-icer
 - Rear view monitor system
 - Intuitive parking assist
- Audio/video system
 - Rear window and outside rear view mirror defogging
 - Climate control
 - Wide view front monitor system

1

Before driving

1-1. Hybrid system

- Hybrid system..... 26
- Hybrid system precautions 30
- Energy monitor/consumption screen..... 35
- Hybrid vehicle driving tips..... 40

1-2. Key information

- Keys 42

1-3. Opening, closing and locking the doors

- Smart access system with push-button start 47
- Wireless remote control 58
- Doors..... 61
- Trunk..... 64

1-4. Adjustable components (seats, mirrors, steering wheel)

- Front seats..... 68

- Driving position memory (driver’s seat) 72
- Head restraints..... 75
- Seat belts 77
- Steering wheel..... 83
- Inside rear view mirror..... 85
- Outside rear view mirrors..... 87

1-5. Opening and closing the windows and moon roof

- Power windows..... 90
- Moon roof 93

1-6. Refueling

- Opening the fuel tank cap..... 97

1-7. Theft deterrent system

- Immobilizer system 101
- Alarm..... 103
- Theft prevention labels (for U.S.A.)..... 106

1-8. Safety information

| | |
|--|-----|
| Correct driving posture | 107 |
| SRS airbags | 109 |
| Front passenger occupant classification system..... | 121 |
| Child restraint systems | 126 |
| Installing child restraints | 130 |

2 When driving

2-1. Driving procedures

| | |
|-------------------------------|-----|
| Driving the vehicle | 142 |
| Power (ignition) switch | 152 |
| EV drive mode | 157 |
| Hybrid transmission | 160 |
| Turn signal lever | 166 |
| Parking brake | 167 |
| Horn..... | 168 |

2-2. Instrument cluster

| | |
|-----------------------------------|-----|
| Gauges and meters | 169 |
| Indicators and warning lights ... | 173 |
| Multi-information display..... | 177 |
| Head-up display | 183 |

2-3. Operating the lights and windshield wipers

| | |
|---------------------------------------|-----|
| Headlight switch..... | 191 |
| Automatic High Beam..... | 196 |
| Fog light switch | 202 |
| Windshield wipers and washer | 204 |
| Headlight cleaner switch | 211 |

2-4. Using other driving systems

| | |
|--------------------------------------|-----|
| Cruise control | 212 |
| Dynamic radar cruise control..... | 216 |
| LKA (Lane-Keeping Assist) | 230 |
| Driving assist systems..... | 238 |
| Hill-start assist control | 243 |
| Pre-Collision System..... | 245 |

2-5. Driving information

| | |
|---------------------------|-----|
| Cargo and luggage..... | 254 |
| Vehicle load limits..... | 257 |
| Winter driving tips | 258 |
| Trailer towing..... | 261 |
| Dinghy towing | 262 |

3 Interior features

3-1. Using the air conditioning system and defogger

| | |
|---|-----|
| Automatic air conditioning system | 266 |
| Rear window defogger switch..... | 274 |
| Windshield wiper de-icer | 275 |

3-2. Using the audio system

| | |
|---|-----|
| Audio system | 276 |
| Using the radio..... | 279 |
| Using the CD player..... | 287 |
| Playing MP3 and WMA discs..... | 295 |
| Operating an iPod..... | 302 |
| Operating a USB memory..... | 310 |
| Optimal use of the audio system | 318 |
| Using the AUX port..... | 321 |
| Using the steering wheel audio switches | 322 |

3-3. Using the Bluetooth® audio system

| | |
|---|-----|
| Bluetooth® audio system | 325 |
| Using the Bluetooth® audio system | 328 |
| Operating a Bluetooth® enabled portable player..... | 333 |
| Setting up a Bluetooth® enabled portable player | 336 |
| Bluetooth® audio system setup | 341 |

3-4. Using the hands-free phone system (for cellular phones)

| | |
|--|-----|
| Hands-free system for cellular phones | 342 |
| Using the hands-free system (for cellular phones)..... | 346 |
| Making a phone call..... | 354 |
| Setting a cellular phone..... | 359 |
| Security and system setup..... | 364 |
| Using the phone book..... | 368 |

3-5. Using the interior lights

| | |
|---------------------------|-----|
| Interior lights list..... | 374 |
| • Interior lights | 375 |
| • Personal lights | 375 |

3-6. Using the storage features

| | |
|-------------------------------|-----|
| List of storage features..... | 377 |
| • Glove box | 378 |
| • Console box..... | 379 |
| • Cup holders..... | 381 |
| • Bottle holders | 383 |
| • Auxiliary boxes..... | 384 |

3-7. Other interior features

| | |
|--------------------------------------|-----|
| Sun visors..... | 385 |
| Vanity mirrors..... | 386 |
| Clock..... | 387 |
| Power outlets..... | 388 |
| Seat heaters and ventilators..... | 389 |
| Armrest | 391 |
| Rear sunshade..... | 392 |
| Floor mat..... | 394 |
| Trunk compartment features..... | 396 |
| Garage door opener | 398 |
| Compass..... | 404 |
| Safety Connect | 408 |

4 Maintenance and care

4-1. Maintenance and care

| | |
|---|-----|
| Cleaning and protecting the vehicle exterior..... | 416 |
| Cleaning and protecting the vehicle interior | 420 |

4-2. Maintenance

| | |
|--|-----|
| Maintenance requirements | 423 |
| General maintenance | 426 |
| Emission inspection and maintenance (I/M) programs | 430 |

4-3. Do-it-yourself maintenance

| | |
|--|-----|
| Do-it-yourself service precautions..... | 431 |
| Hood | 434 |
| Positioning a floor jack..... | 435 |
| Engine compartment..... | 437 |
| 12-volt battery..... | 447 |
| Tires | 451 |
| Tire inflation pressure..... | 459 |
| Wheels | 462 |
| Air conditioning filter..... | 464 |
| Electronic key battery | 467 |
| Checking and replacing fuses | 469 |
| Light bulbs..... | 481 |

5 When trouble arises

5-1. Essential information

| | |
|--|-----|
| Emergency flashers | 494 |
| If your vehicle needs to be towed | 495 |
| If you think something is wrong | 501 |

5-2. Steps to take in an emergency

If a warning light turns on
or a warning buzzer
sounds..... 502

If a warning message is
displayed..... 512

If you have a flat tire..... 532

If the hybrid system will
not start..... 541

If you lose your keys 543

If the electronic key does not
operate properly 544

If the vehicle 12-volt battery
is discharged 547

If your vehicle overheats 552

If the vehicle becomes
stuck..... 556

If your vehicle has to be
stopped in an emergency 558

6 Vehicle specifications

6-1. Specifications

Maintenance data
(fuel, oil level, etc.)..... 560

Fuel information..... 569

Tire information..... 572

6-2. Customization

Customizable features..... 584

6-3. Initialization

Items to initialize 596

7 For owners

Reporting safety defects for
U.S. owners..... 598

Seat belt instructions
for Canadian owners
(in French) 599

SRS airbag instructions
for Canadian owners
(in French) 601

Index

Abbreviation list..... 612

Alphabetical index 614

What to do if... 625

1

2

3

4

5

6

7